 


Operation Guide IC-01

CASIO®

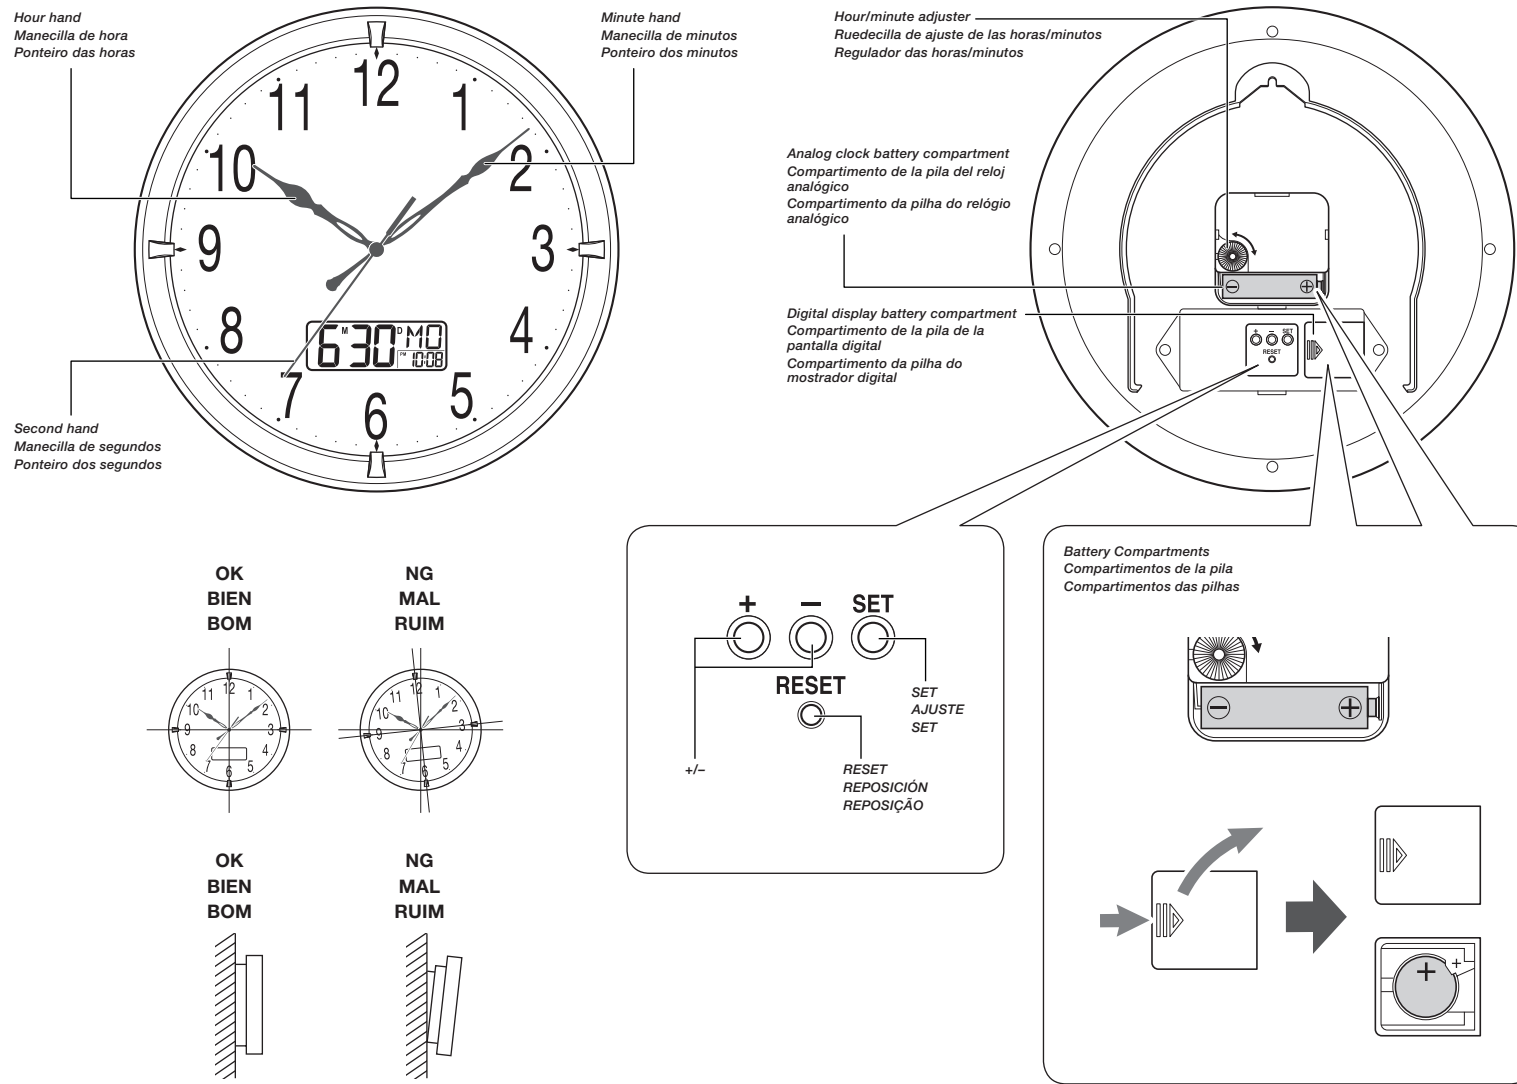

Operation Guide IC-01

CASIO®

- A sticker is affixed to the glass of this clock when you purchase it. Be sure to remove the sticker before using the clock.
- Depending on the clock model, the configuration of your clock may differ somewhat from that shown in the illustration.

OPERATING PRECAUTIONS

- Do not use or store this clock in areas exposed to temperature extremes, strong magnetism, strong vibration, or strong impact.
- Heat can shorten battery life and cause malfunction. Keep the clock away from heaters and direct sunlight when using it.
- Never use the clock in a bathroom or any other area subject to high humidity.
- Never try to take the clock apart. Doing so can cause malfunction.
- To clean the clock, use a soft, dry cloth or a cloth moistened in a solution of water and a mild neutral detergent. Wring out all excess moisture from the cloth. Never use thinner, benzene, alcohol or other similar agents.
- Be sure to keep all user documentation handy for future reference.

Note that CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of this product or its malfunction.

Important!

- The times indicated by the analog clock and the digital display are not coordinated with each other. Use the procedures below to configure the time settings of each one.

CONFIGURING ANALOG CLOCK SETTINGS

To start clock

Insert a battery into **analog clock battery compartment** with polarity as indicated.

To set time

Turn the **hour/minute adjuster** in either direction.

 
To adjust seconds

Remove the battery to stop the second hand at 12 o'clock position. Replace the battery at a time signal to restart the second hand on the correct second.


- The current time setting may be slightly off, depending on the timing when you load the battery to restart timing.

CONFIGURING THE DIGITAL TIME SETTING

1. Press the **SET** button to cycle through the setting screens as shown below.

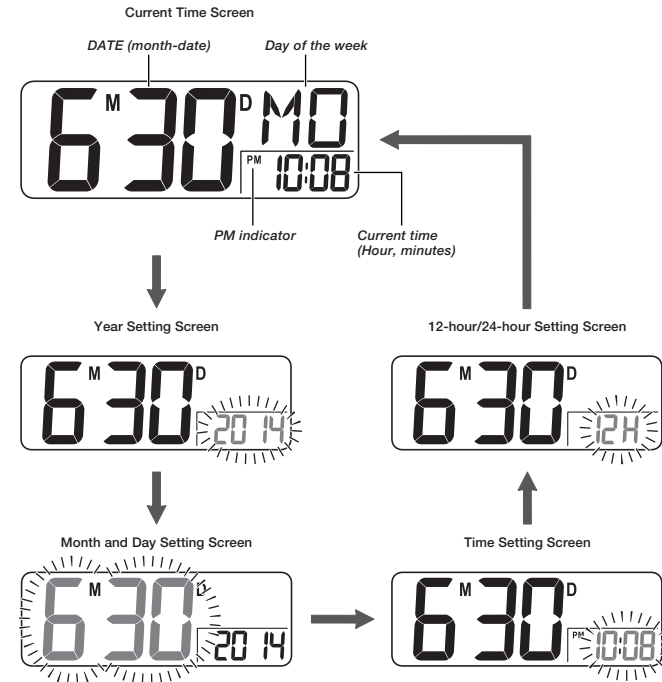

 2. While the screen you want is on the display, use the **+** and **-** buttons to change the digits that are flashing.

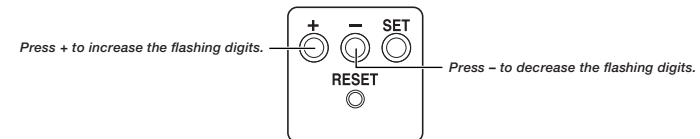

- Holding down **+** or **-** changes the flashing digits at high speed.
- You can set the year in the range of 2000 to 2099. The day of the week is set automatically in accordance with the date setting.
- Pressing **+** or **-** while the Time Setting Screen is on the display causes the seconds count to be reset to 00.
- Each press of **+** or **-** while the 12-hour/24-hour Setting Screen is on the display toggles between 12-hour and 24-hour timekeeping.

3. After making the settings you want, use the **SET button** to display the Current Time Screen.
- The clock automatically returns to the Current Time Screen if you leave a setting screen on the display for about five minutes without performing any operation.

BATTERY REPLACEMENT

<Analog clock battery>

1. Remove the old battery.
2. Load a new battery, making sure that its positive (+) and negative (-) ends are facing correctly.
 - Loading a battery incorrectly can cause it to burst and damage the clock.

<Digital display battery>

- Replace a battery whenever the display of the clock becomes dim and difficult to read.
1. Open the battery compartment cover as shown in the illustration.
 2. Remove the old battery.
 3. Load a new battery, making sure that its positive (+) and negative (-) ends are facing correctly.
 - Loading a battery incorrectly can cause it to burst and damage the clock.
 4. Replace the battery compartment cover.
 5. Press the **RESET button**. Be sure to press the **RESET button** after replacing a battery.

Battery precautions

- Keep batteries out of the reach of small children. If a battery is accidentally swallowed, contact a physician immediately.
- Be sure to load the batteries with their positive (+) and negative (-) ends facing correctly.
- Never charge the batteries that come with the product.
- Should batteries ever leak while in the product, wipe out the fluid with a cloth, taking care not to let any get onto your skin.
- Replace the batteries at least once a year, even if the current batteries are working properly.
- The batteries that come with the product lose some of their power during transport and storage.

SPECIFICATIONS

<Analog Clock>

Accuracy at Normal Temperature: ±30 seconds a month

Display Contents: Hour, minute, second (3 hands)

Battery Life: Approximately 1 year

Battery: One AA size battery (Type: R6P)

Ambient Temperature Range: 0°C to 40°C (32°F to 104°F)

<Digital Clock>

Accuracy at Normal Temperature: ±30 seconds a month

Display Contents: Month, day, day of the week, hour, minute, pm (PM)

Time system: Switchable between 12-hour and 24-hour formats

Calendar System: Auto-calendar pre-programmed from the year 2000 to 2099

Battery Life: Approximately 1 year

Battery: One lithium battery (Type: CR2032)

Ambient Temperature Range: 0°C to 40°C (32°F to 104°F)